



Smart Door Lock OM7-B

Technical Specification

Battery: 4pcs (AA) INCLUDED Working voltage: 6VDC ◆Working current: ≤300mA ◆Static current: ≤30uA ◆Working Temperature: -20~60°C ♦Working humidity: 10~90RH Super administrator: 1 ♦One-time users: 5 ◆Alarm voltage: ≤4.6V ◆Password number: 6~12 digits Card type: Mifare Card Super password number: 64 digits Storage capacity: 99 sets (password+card) Ordinary user: 2 (card, mobile) Temporary users: 10 groups (App sets the time limited) Remote dynamic code: 1 group (valid within 5 minutes for the app setting) Unlockway: Password, MF Card, app, emergency key Automatic lock time: set 1-99S

◆Suitable door thicknes: 38-48mm

Factory administrator/user code: "666888" (manage) password/unlock the door) Administrators: password 1 (Super administrator), card 1, app 1.



Keypad/ID code Function Description

- Activate keypad: Touch the key pad in the center.
- ◆ Lock: Press 【#】
- ◆ Unlock: Password code + 【#】.
- ◆ Back/Exit: Press 【*】
- ◆ Confirm: Press (#)
- ◆ System will exit when its not operated for more than 8 seconds.
- Administrator ID is number: 0, 1, 2 (password, card, app)
- ♦ One-time user ID is from No 3 to No 7
- Normal user ID is from No 18 to No 99

Lock Setting

1. Modify administrator code

Long press [*] ——input administrator code——press [#] ——input new administrator code——press [#] ——input new administrator code——press 【#】

2. Modify user code

Long press **[*]** ——input user code——press **[#]** ——input new user code——press **[#]** ——input new user code

——press 【#】

3. Modify card

Long press **[*]** ——put old card on keypad——put new card on keypad.



Other setting

1. Add a card as administrator (ID NO.1, only one administrator can be added) Long press [#] ——input administrator code——press [#] ——press[1] ——press [2] ——put card on keypad.



2. Add normal users (Total of 82 users can be added. ID NO. 18 to 92)

Long press **[#]** ——input administrator code ——press **[#]** ——press[1] ——press[1]——press[1]——input code or card——press **[#]** ——input code——press **[#]** (*Note:* You only need to enter the card once.).

3. Add one-time users (Total of 5 users can be added. ID NO. 3 to 5) Long press **[#]** ——input administrator code——press **[#]** ——press[1] —— press[2] ——input code ——press **[** #] ——input code——press **[#]**

(**Note:** The one-time user is deleted after first use and its only password capable, card cant be used.)

4. Unlock mode setting (single mode/double mode)

Long press **[#]** ——input administrator code——press [2] ——press [2] ——press [1] **single user** or [2]**double user** ——press **[#]**

(**Note:** If you set double mode unlock, you need to open the door with any combination of passwords you have set. Password + password, password + card).

5. Delete single password

Long press [#] ——input administrator code——press [#]

——press[1] ——press [3] ——press [1] ——input code, card or user ID NO.

O 6. Delete all users Long press [#] ——input administrator code——press [#] ——press[1] ——press [3] ——press [2]. O

7. Manual/automatic lock setting

Long press [#] ——input administrator code——press [#] ——press[2]——press[2] ——press [3] ——press[1] **manual** or [2] auto lock.

(*Note:* automatic lock time setting is 1-99S.).

8. Volume setting Long press [#] ——input administrator code——press [#] ——press[2] ——press [3] ——press [3] ——Press [1] volume up or [2] volume down

9. Network setting and APP pairing

9.1 On lock: Long press [#] ——input administrator code——press [#] ——press [2] ——press[1] ——press [1] **Smart Mode (Ez Mode)** [2] AP mode.

(Note: Make sure APP and cellphone are connected to the same WiFi *network*).

9.2 On smart phone: Search and download 'Smart Life' in app store.

9.3 Open the APP, register and login with cellphone number.

1. Doorlock configuration in EZ Mode open "Smart Life" app——(1) go to add device——(2) Security & Sensor—Lock (WiFi) ——(3) select WiFi network and enter the WiFi password——(4.1) just confirm "0" key indicator rapidly blink——(4.2) select fast flashing ——(5) waiting to connect to network—— (6) network and app set up succeeded.

CMUN

(1)











(4.1)

















11-30 21:56 0 Password Unlock





Scan	Register on	Initialize the
levices.	Cloud:	device

উ	30	Ë	000 000
Alarm	Users	Records	Temporary PW



2. AP Network Operate (if your home WiFi signal is weak please choose AP mode)

On lock: press $[\#] \rightarrow$ input administrator code \rightarrow press $[\#] \rightarrow$ press [2] \rightarrow press [1].

open "Smart Life" APP \rightarrow 1.add device \rightarrow 2.Security&Sensor \rightarrow Lock (WiFi) \rightarrow 3.select WIFI network and enter WiFi password \rightarrow (4.1) just confirm "0" key indicator slowly blink \rightarrow (4.2) select slow flashing \rightarrow 5.choose hotspot to connect \rightarrow 6. connect to the Doorlock hotspot in the WiFi configuration of your phone \rightarrow 7.click return arrow when you connected successful \rightarrow waiting for connecting network to succeed.

1.		2.	
→ AINMC	0 🕒	< Add Manually Auto Scan	Cancel
Set your home location	Home for more information >	Electrician Video Surveillance	Select 2.4 GHz Wi-lenter pass
All Devices Living Room	1	Smart Large Camera Home Ap	Common router set
		Small Home Ap	U
		Kitchen Appliances Lock Lock Lock (Wi-Fi) (Zigbee) (BLE)	🖀 2.4 _{6Hz}
		Security & Sensors	
No devic	ces	Exercise & LOCK Health (NB-IoT)	ି OMNIA
Add Dev	vice	Video Surve illance	
		Gateway Control Accessory Cabinet Lock Padlock (BLE) (BLE) (BLE)	Next
		Energy	
		Entertainm U-shaped Lock Box ent Lock (BLE) (BLE)	





9.4 Message notification Open "Smart Life" app \rightarrow Me \rightarrow setting \rightarrow Notification (*Note:* Most mobile phones will receive notification when you finish configuration).



9.5 Remote unlock request

Input 888 # to request remote unlock . The APP will send a notification, then you can unlock remotely on the app within 90S.

9.6 Temporary password (ID NO.8~17)

You can generate temporary passwords manually or automatically to send to the guests.

An expiration time can be set. Note: You can make maximum of 10 groups/temporary passwords.

9.7 Remote dynamic password: (After the APP and lock has connected successfully, on the APP slide to the left)

It can automatically generate remote dynamic passwords that are valid for 5 minutes.

Other Lock Function

1.Left/Right conversion function

To install the lock for left side, ensure the toggle button on the back assembly is set to L .

To install the lock for right side, ensure the toggle button on the back assembly is set to R .

How to distinguish your door is LETF or RIGHT



2.Anti-Peeping Password

You can input any code before and after the right password to unlock the door.

Such as:

 $\textcircled{1} \times \times \times \times \times + 666888$

2**666888+**×××

 $(3) \times \times 666888 + \times \times \times$

3.Emergency key unlock

Remove the cover on the lock keypad, insert the emergency key to unlock the door.

(Tip: You can place the key outside the door in case of equipment failure or dead battery.)

4.Emergency power supply

The charge port is on the bottom of the front plate, micro usb

data connector is available to charge.

5. Anti-lock

The anti-lock button is under the knob on the back panel. After setting the anti-lock, only the administrator can use the password, card or smart phone to open the door.

6.Illegal intrusion alarm

When the user opens the door with the hijack password or enters the wrong password three times in a row, the smart lock will alert.

\times Follow the steps below to set the hijack password.















7.Low voltage alarm If the voltage is lower than 4.6V, the lock will prompt and flash.



8.Reset to factory settings

Remove the back panel, press the reset button for 3 seconds. After resetting, the administrator password changes to 666888, all data will be deleted.

Contents list

Lock	1 set	Drill hole drawing	1 pcs
Key	2 pcs	Screwdriver	1 pcs
Latch	1 set	Silicone pad	1 pcs
Screws	1 bag		•
Lock set	1 set		
Manual	1 pcs	Cross recessed screws	battery cover
Tools needed: 1.Screwdriver 2.Ruler 3.Pen	front	fixing plate panel	back panel



Cross recessed tapping screws





New door:

1. Making 2 holes, one of 10mm, and the other of 55mm. The distance between the two holes is 67.3mm.

2. Distance from the center of the door hole to the edge is 60/70mm.

3. Make a 1mm deep rectangular hole slot (L:58mm, W: 27mm) on the side of the door, and then make a round hole with a diameter of 25mm to punch through.

Old door:

If the door has already a deadbolt installed, follow instructions to install new lock. Distance from the center of the door hole to the

edge of the door is 60/70mm measure to adjust the latch length.

Adjust latch: you can do it by rotating, stretching or pressing back to adjust from 60mm/70mm.



3. Install the latch, check that the latch direction is correct.



4. Install the strike plate

6.Install fixing plate

Cross recessed screw M4*20

Battery cover

7. Install the back panel, please make sure placement is correct.

Cross recessed screw M4*20

Smart Door Lock OM7-B User Manual

www.smartomnia.com

